



Genesis 2™ TV User Manual

Contents

Remote Control.....	2
Basic Operations.....	3
Navigating the On-screen Menu	4
Selecting the On-Screen Language.....	5
Display Menu Options.....	6
Audio Menu Options	7
Television Connections	8

Remote Control



BUTTON	FUNCTION
OFF	Power off
ON	Power on
0 - 9	Display channel guide
Dash (-)	Select TV signal input source
Last	N/A
CC	Display closed captioning
Volume ▲ / ▼	Adjust volume up or down
Mute	Toggle volume off and on
Channel + / -	Scroll up or down through channel numbers
Menu Arrows ▲, ▼, ◀, ▶	Navigate through on-screen menus
Enter	Select an option or sub-menu
◀◀	Rewind program
■	Stop program
▶	Play program
▶▶	Fast-forward program
Sleep	Set time for TV to play before it turns off
🏠	Display on-screen menu
List	Display channel list for digital TV
Info	Display current signal source
Red, Green, Yellow, Blue	<i>Available for custom VOD content</i>

Basic Operations

TURNING YOUR TV ON

1. Connect the TV to an electrical outlet (NEMA 5-15) using the power cable. The LCD blinks blue and your TV enters a power on standby mode.
2. Press the **ON** button on the remote control.

TURNING YOUR TV OFF

With your TV on, press the **OFF** button on the remote control. Your TV will return to the power on standby mode.

ADJUSTING YOUR TV VOLUME

- Press **Volume ▲ / ▼** to adjust the TV volume up or down.
- Press **Mute** to turn the sound off.
- Press **Mute** to turn the sound back on again.

SELECTING A TV CHANNEL


- To scroll up or down the list of channels on your TV, use the **Channel +** and **-** buttons.
- To enter a channel number, use the **0** to **9** buttons.
 - To select a 1-digit channel number (such as channel 5): press the **5** button.
 - To select a 2-digit channel number (such as channel 20): press the **2** button, then the **0** button.
 - To select a 3-digit channel number (such as channel 103): press the **1** button, the **0** button, and then the **3** button.

SELECTING YOUR INPUT SOURCE

- To display a list of input source options, press the **Dash (-)** button on the remote control. Input sources toggle in a small window. Choices include HDMI, HDMI2 and USB.
- Press **▲** or **▼** to scroll through the choices. Press **Enter** to select and exit the menu.


Navigating the On-Screen Menu

Use the remote control to navigate the on-screen menu. From here you will set up your TV's programmable options and settings.

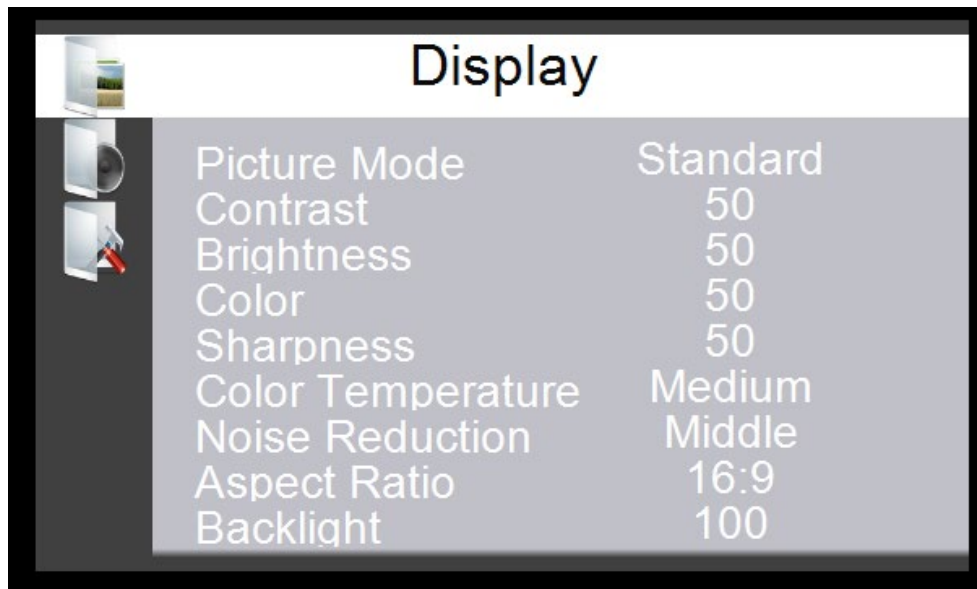

- Press  to display the on-screen menu.
- Press  /  to scroll up and down the list of sub-menus.
- Press  to access the sub-menu controls.
- Press  or  to return to menu.
- Press  to exit and save your settings.


Selecting the On-Screen Language

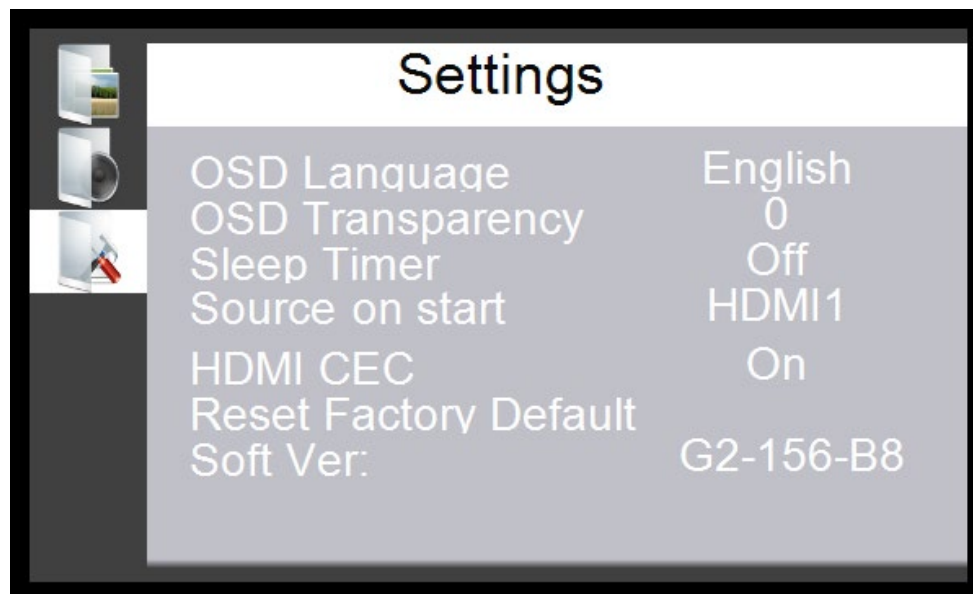

- Press  to display the on-screen menu.
- Press  /  to scroll and select the Settings sub-menu.
- Press  to access the sub-menu controls.
- Press  or  to select the language you want.
- When you are satisfied with your settings, press  to select and exit.

OSD Language	Select the language for your on-screen display.
OSD Transparency	Set the transparency value for your on-screen display.
Sleep Timer	Set the time clock for your on-screen display.
Source on start	Default input upon startup.
HDMI CEC	Allows devices connected to the TV through the HDMI port to communicate back and forth with your TV.
Reset Factory Default	Return all settings to the factory defaults.


Display Menu Options

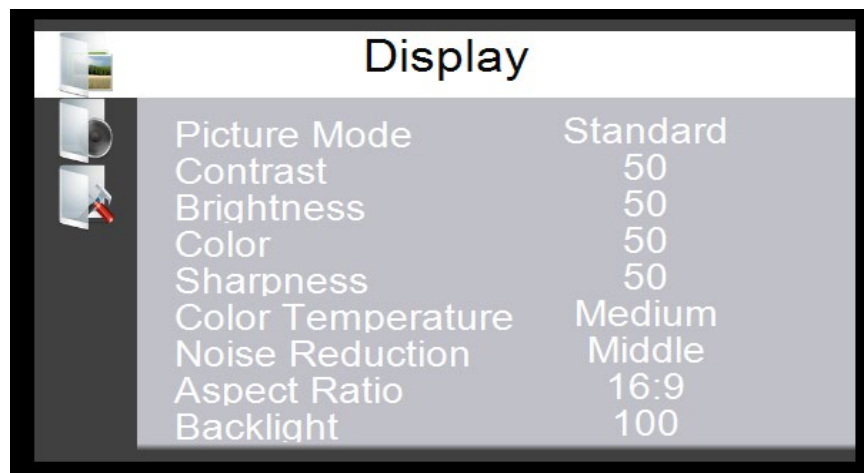

- Press to display the on-screen menu.
- Press to select the **Display** sub-menu.
- Press / to scroll and select the sub-menu controls.
- Press or to adjust the control settings.
- When you are satisfied with your settings, press to select and exit.

Picture Mode	You can use preset modes (Soft, Standard, Vivid) or you can customize your own settings by choosing the User mode.
Contrast	Controls the difference between the darkest and the lightest areas of your TV image.
Brightness	Controls the color of dark pixels on screen from gray to black.
Color	Controls the color saturation of your TV image.
Sharpness	Controls the focus of your TV image.
Color Temperature	Controls the warmth or coolness of the colors in your video image. Picture mode must be in User mode. Use the and buttons to cycle through options.
Noise Reduction	Controls visual “noise” that appears in video images.
Aspect Ratio	Image ratio between width and height.
Backlight	Controls the luminance of display from dim to light.

Audio Menu Options

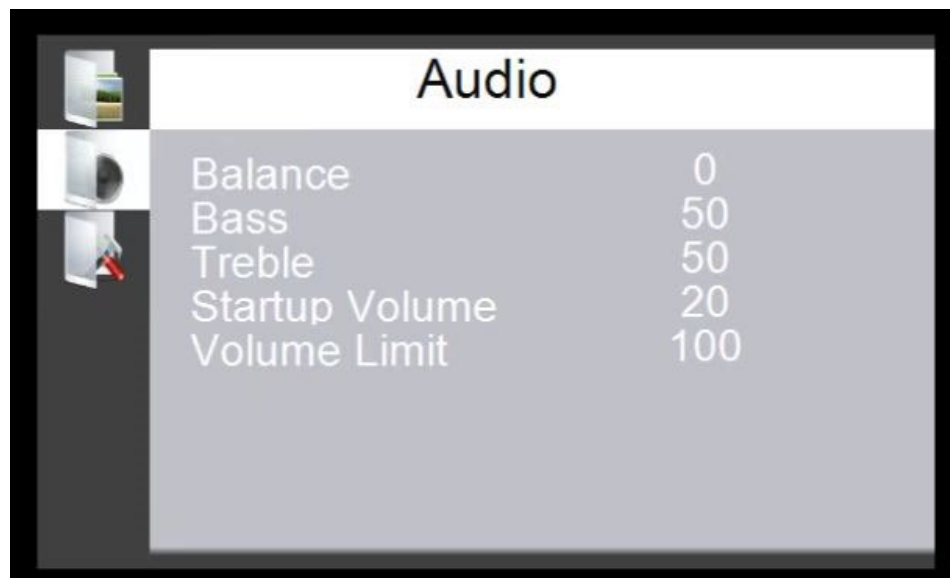

- Press  to display the on-screen menu.
- Press  /  to scroll and select the Audio sub-menu.
- Press **Enter** to access the sub-menu.
- Press  /  to scroll and select the sub-menu controls.
- Press  or  to adjust the control settings.
- When you are satisfied with your settings, press  to select and exit.

Balance	Adjust the balance between left and right speaker.
Bass	Adjust the level of the lower-pitched sounds.
Treble	Adjust the level of the higher-pitched sounds.
Startup Volume	Default volume upon turning on TV. *Requires Password - 2022
Volume Limit	Set TV's maximum volume limit. *Requires Password - 2022

Television Connections



1	Output for Right Speaker
2	Output for Left Speaker
3	Line Out
4	IR Out
5	IR In
6	RS-232 Port
7	HDMI 2 Video & Audio In (HDC)
8	HDMI 1 CEC Video & Audio In (HDCP)
9	USB
10	Power Plug (IEC320 C13)